

2.6.0-test1/2 won't let me use keyboard

Source: <http://linux.derkeiler.com/Mailing-Lists/Kernel/2003-07/2401.html>

From: adri (adri_at_archetti.org)

Date: 07/28/03

Date: Mon, 28 Jul 2003 23:45:23 +0200

To: linux-kernel@vger.kernel.org

hi all,

I have a problem compiling 2.6.0-test1, and later 2.6.0-test2.

booting the kernel goes well, but when i try to log in my system, keyboard seems to be crazy, and when i press a key, it writes the same key for almost 4 times, so it is very impossible log in.

/var/log/syslog don't seems to have something strange.

my system is a laptop hp pavilion ze4200, lspci tells me:

00:00.0 Host bridge: ATI Technologies Inc: Unknown device cab0 (rev 13)

00:01.0 PCI bridge: ATI Technologies Inc U1/A3 AGP Bridge [IGP 320M] (rev 01)

00:02.0 USB Controller: ALi Corporation USB 1.1 Controller (rev 03)

00:06.0 Multimedia audio controller: ALi Corporation M5451 PCI AC-Link Controller Audio Device (rev 02)

00:07.0 ISA bridge: ALi Corporation M1533 PCI to ISA Bridge [Aladdin IV]

00:08.0 Modem: ALi Corporation Intel 537 [M5457 AC-Link Modem]

00:0a.0 CardBus bridge: O2 Micro, Inc. OZ6912 Cardbus Controller

00:0c.0 FireWire (IEEE 1394): Texas Instruments TSB43AB21 IEEE-1394a-2000 Controller (PHY/Link)

00:10.0 IDE interface: ALi Corporation M5229 IDE (rev c4)

00:11.0 Bridge: ALi Corporation M7101 PMU

00:12.0 Ethernet controller: National Semiconductor Corporation DP83815 (MacPhyter) Ethernet Controller

01:05.0 VGA compatible controller: ATI Technologies Inc Radeon Mobility U1

i try to use 2.6.0-test1, test1-ac1, test1-mm1, test1-bk2, test2, with always the same result.

is there someone who can help don't get crazy?

thanks

adri

--

icq# 63011800 - jabber: adri@jabber.org

gnupg key id: 4472FB13

"Non esiste vento favorevole per il marinaio che non sa dove andare."

Seneca

-

Linux-Kernel: 2.6.0-test1/2 won't let me use keyboard

To unsubscribe from this list: send the line "unsubscribe linux-kernel" in the body of a message to majordomo@vger.kernel.org

More majordomo info at <http://vger.kernel.org/majordomo-info.html>

Please read the FAQ at <http://www.tux.org/lkml/>