

## [SLE] Nvidia DVI && TV-out problem

**Source:** <http://linux.derkeiler.com/Mailing-Lists/SuSE/2004-03/3213.html>

---

**From:** Alex Khroustalev ([svintuss\\_at\\_voxnet.ru](mailto:svintuss_at_voxnet.ru))

**Date:** 03/31/04

To: [suse-linux-e@suse.com](mailto:suse-linux-e@suse.com)

Date: Thu, 1 Apr 2004 00:11:35 +0400

Hi. About a month ago I upgraded my Radeon 7500LE to nVidia GeForce FX5600 Ultra (ABIT GF FX5600 Ultra Otes). I wanted to have a working tv-out but got plenty of issues instead.

1) I have a TFT monitor that is connected via DVI. The nvidia driver (version 5336). The graphic card does not recognize the monitor. In XFree log I can see, that the driver sends signal to VGA out. I had to specify in XF86Config ConnectedMonitor "DFP".

2) If I connect a tv, the driver recognizes both DVI and TV-out without the ConnectedMonitor string. But it thinks that tv is the primary device. Specifying ConnectedMonitor "DFP,TV" had no effect.

3) When connected both TV and DVI the tv resolution is max 640x480. (And, as the driver thinks TV is the first device, the kde panel and windows are shrunked to 640x480).

4) When TV and TFT (via DVI) are connected the image on TFT blinks once a minute.

5) When tv is connected and the monitor is connected via VGA, there is no problem. TV may be 1024x768, the image on the monitor doesn't blink, VGA is the first device.

a) Am I the only one who experience such a problem (is that a nvidia driver, chipset or ABIT's video card issue) ?

b) Can it be solved somehow? Driver update, or installing previous version? (I think there is no problem in Windows, but I have no possibility to test the card there).

Greetings, Alex

--

Check the headers for your unsubscription address

For additional commands send e-mail to [suse-linux-e-help@suse.com](mailto:suse-linux-e-help@suse.com)

Also check the archives at <http://lists.suse.com>

Please read the FAQs: [suse-linux-e-faq@suse.com](mailto:suse-linux-e-faq@suse.com)